




Nostalgia Electrics RHP-310 Replacing Housing Replacement

If your outer housing is cracked and beyond repair, you will want to use this guide to replace the housing. Follow the steps below.

Written By: Dana Clarke

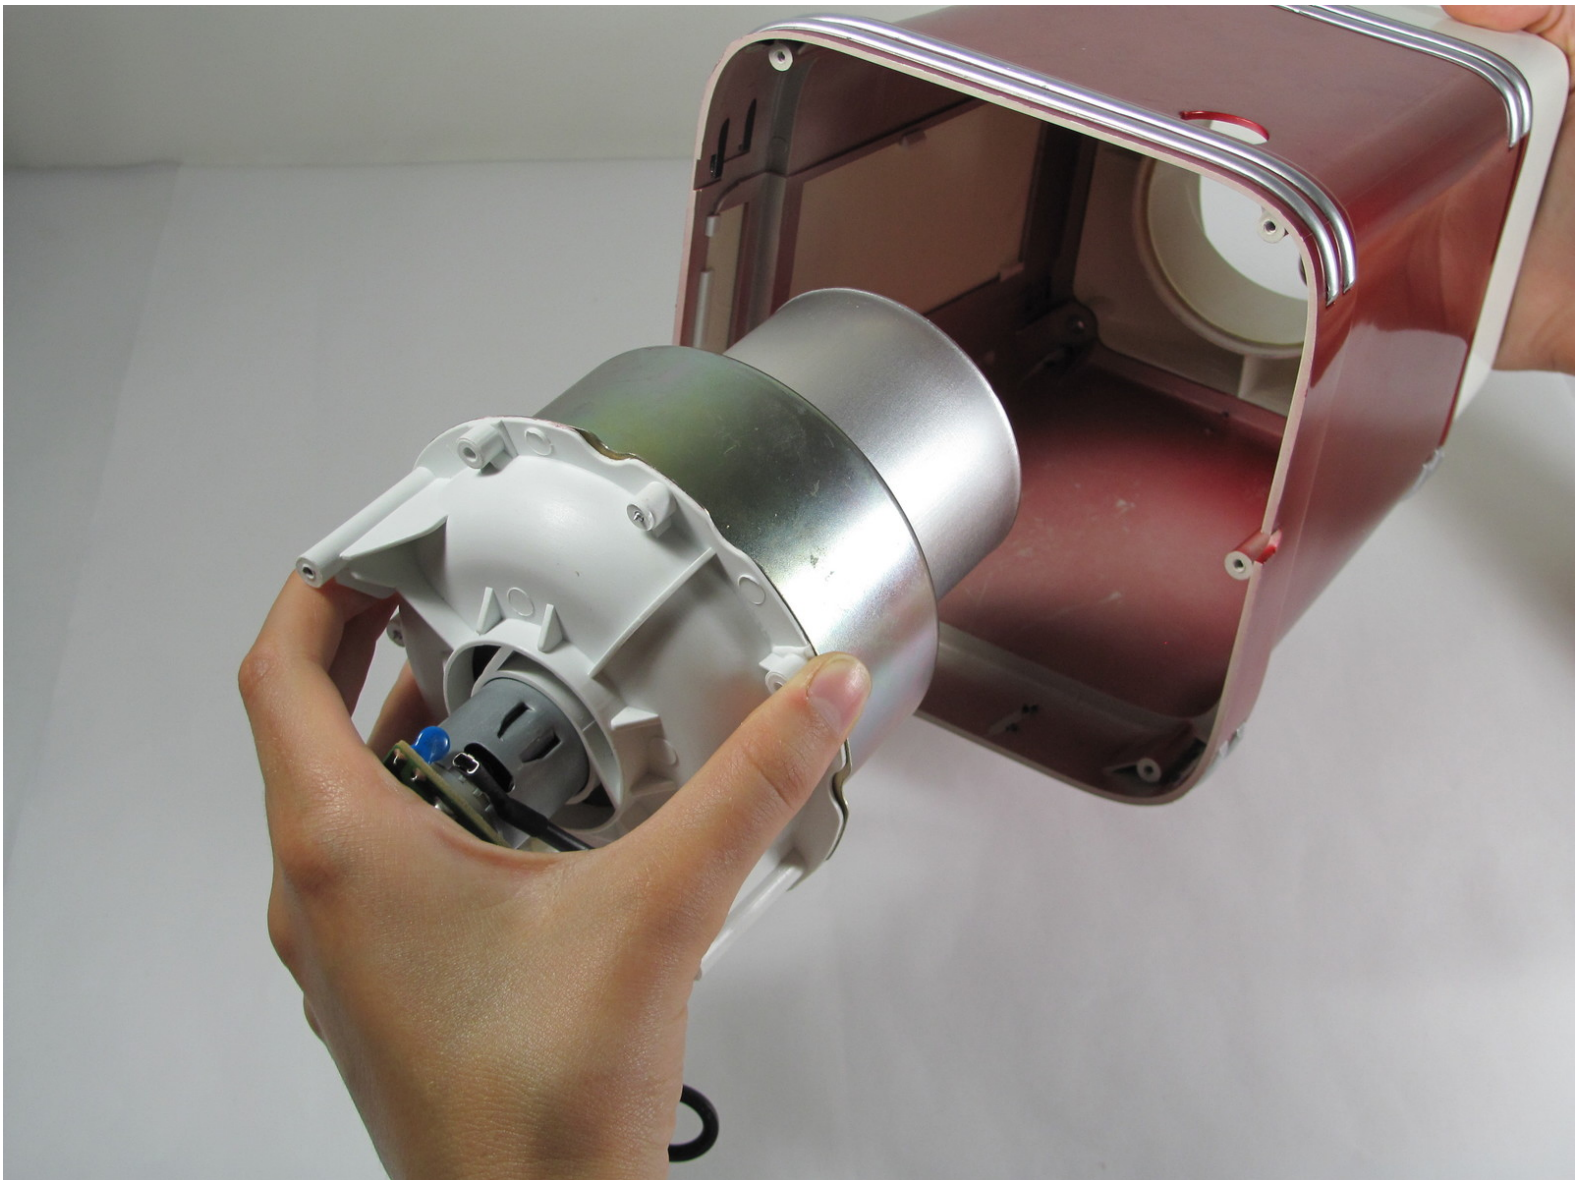

INTRODUCTION

Follow the steps for replacing the power switch. This guide will start right after replacing power switch ends.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [New Housing](#) (1)
-


Step 1 — Power Switch



⚠ Unplug popper.


- Remove plastic lid by picking the lid up.

Step 2

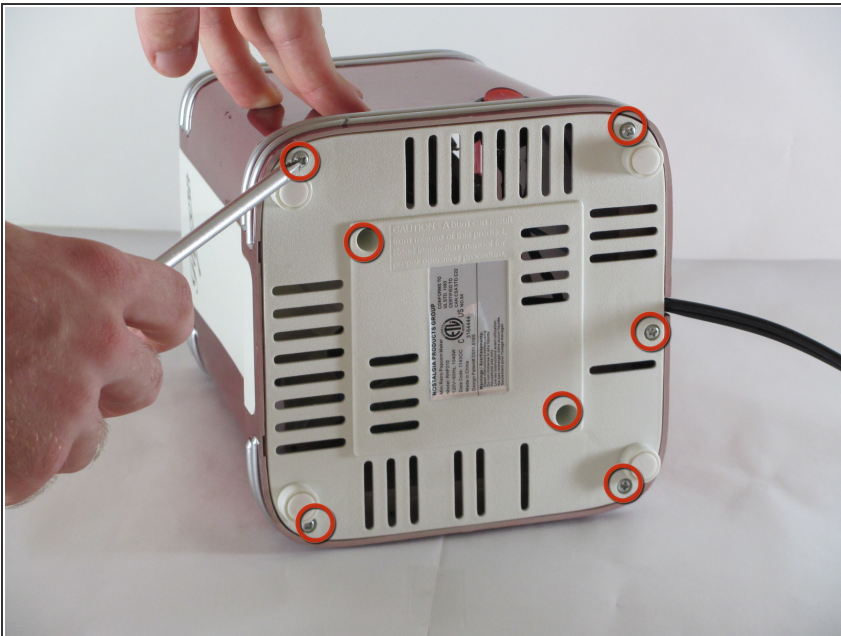



- Flip the popper on its side.
- Remove the screws on the bottom with the Phillips #2 phillips head screwdriver.
- ⓘ There are seven screws on the base. Five screws on the perimeter (12mm Philips #2 screws) and two in the middle (15 mm Philips #2 screws).

Step 3

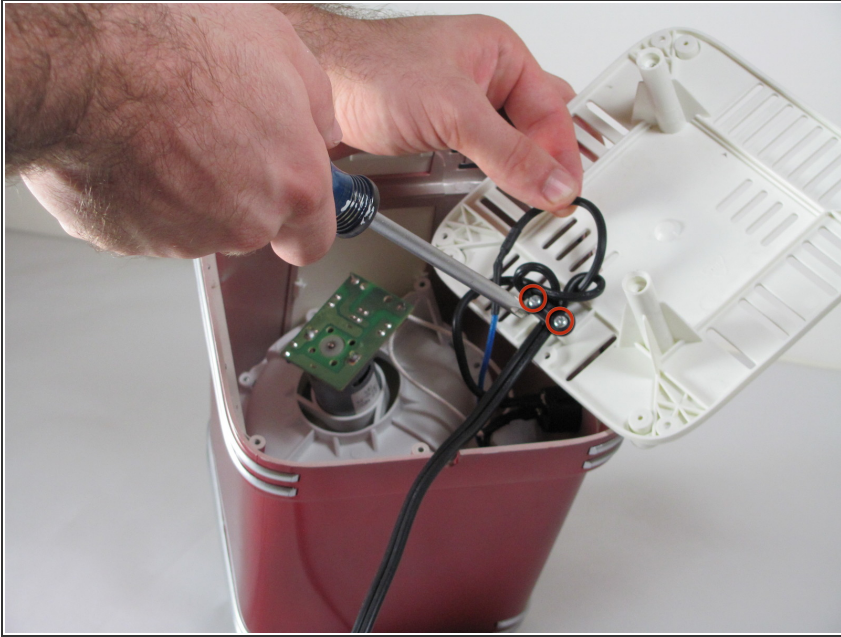

- Remove the base.
- ⓘ Save the screws you took out of the bottom in a safe place. They will be needed to reattach the housing to the base.
- Unscrew the two screws (10 mm Philips #2 screws) from the base.
- Remove the base and set it aside for now.

Step 4

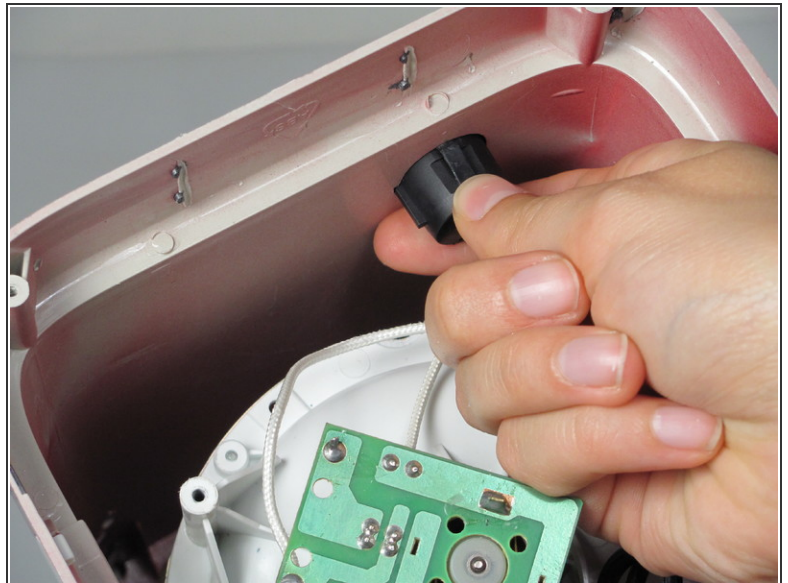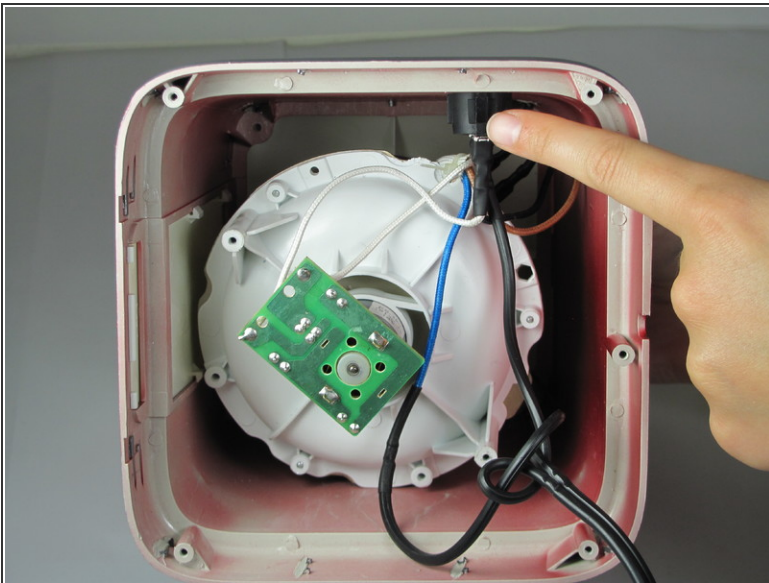

- Locate the power switch connected to the side of the housing.
- Carefully pinch the sides of the power switch.
- Push the power button up and out of the housing.

Step 5




- Now that the power switch is removed from the housing, you have to remove the wires connected to the power switch.
- Use the plastic opening tool to gently pry the wires loose from the power switch.
- ⓘ The wires should pop easily out from the power switch.

Step 6



- Remove the power switch from the device.
- You can now replace the power switch if necessary.

Step 7 — Replacing Housing

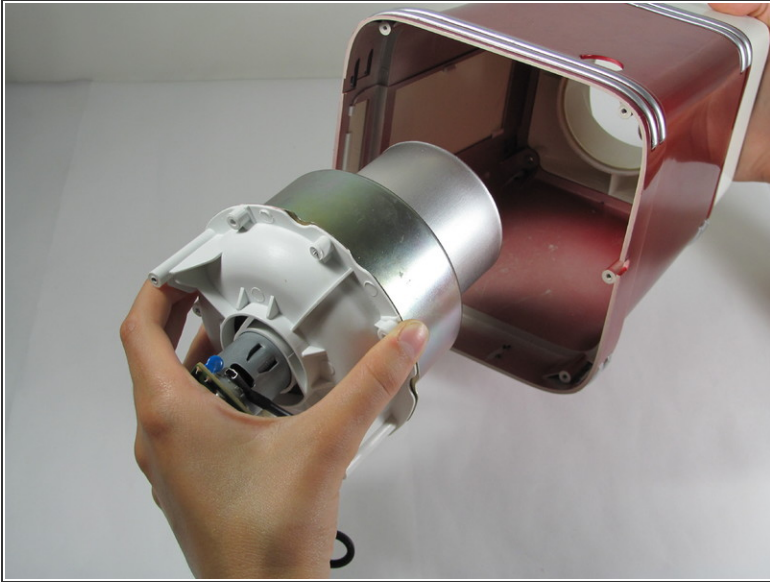

- Now that the power switch is disconnected from the popper, you will need to remove the white top.
- Gently remove the heating component from the popper.
- Unscrew the four screws (11mm Philips #2 screws) that connect the white top to the housing.

Step 8



- Remove the white top from the housing.
- ⓘ Save the screws from previous step. You will need them to connect the new housing to the white top.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:50:58 AM.